

>Welcome to Xfinity TV and Xfinity Internet!



TV Watching Tips and Tricks

Voice Control

Push and hold the **Voice Control/Microphone**  button while speaking a command into the microphone located at the top of the remote. Release the button when you have finished a command. Here are some examples of commands:

- "Watch NBC"
- "Suits"
- "Golf"
- "Find free movies"
- "Turn on Closed Captioning"

When is the microphone on?

The microphone is only on when you are pressing and holding the  button on your X1 Remote. A flashing light on your X1 remote and a microphone symbol on the TV indicates that the microphone is on and listening for your commands. When you have finished a voice command, release the  button and look at the TV for your results.

Quick Troubleshooting Tips

Visit www.xfinity.com/support/x1/

- Make sure your TV is set to the correct Input. Press the **TV Input** button to switch to the next available input on your TV.
- Be sure both the TV and X1 box are plugged in to power.
- Turn off the TV and X1 Box power, wait 10 seconds and then turn the power back on for both devices.
- To view program listings, select **Guide**.
- Ensure that the connections on the X1 box, television and Wireless Gateway are all properly tightened.

1-855-307-4896