

# Get Connected

The Xfinity Wireless Gateway in this unit provides the functionality of a Wi-Fi router and a DOCSIS 3.0 cable modem in a single device.

## For a Wireless Connection


1. Enable WiFi on your wireless device.
2. Select the network name for your unit.
3. Enter your WiFi password.

WiFi information:

## Wired Connection

If you have an Ethernet cable and prefer wired connectivity please follow the instructions below.

1. Plug one end of the Ethernet cable into the Ethernet port on your computer or device and plug the other end to any available port on the back of the Wireless Gateway.
2. Make sure the online connection light on the front of the Wireless Gateway is not flashing and remains solid. This is the 3rd light from the top and may be labeled Online, Sync, Cable or Ready.

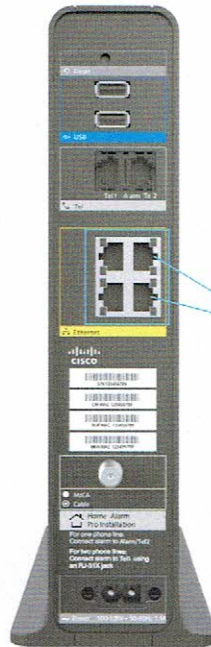

# Meet Your New X1 Remote\*


## Shortcuts

- A** Help  
Note: Press **A** twice to bring up accessibility features.
- B** Display video window while browsing menus.
- C** Sports app
- D** Delete history from Last Watched.

## Back arrow

Press and release for last channel, show or screen. Press twice to exit.

\*Actual remote format and size may vary, but button functionality is the same.

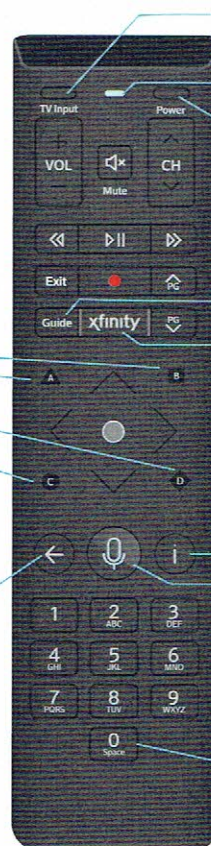

## TV Input

Switches to the next available input on your TV.

## Mic/Status LED

## Power

## Guide

Displays live TV listings. Press Guide twice to see alternative guide views and filter options.

## Xfinity/menu

Access search and settings, Xfinity On Demand, apps and the guide.

## Info

Displays information about the programs and notifications.

## Voice control

Use voice commands to search for networks, shows, or your favorite actor.

## Number keys

Use predictive text (T9) to quickly search for content.

We hope you enjoy your Xfinity TV and Internet experience!

